

Keychain Stopwatch

with Clock, Timer, Wet Compass and Thermometer

63-1126

OWNER'S MANUAL — Please read before using this equipment.

! IMPORTANT !


If an icon appears at the end of a paragraph, go to the box on that page with the corresponding icon for pertinent information.

⚠ — Warning

! — Important

⚡ — Caution

✓ — Note

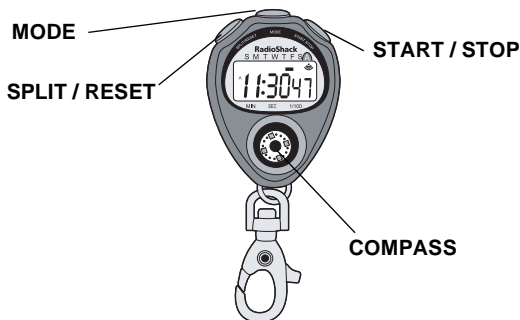

Thank you for purchasing the RadioShack Keychain Stopwatch. This handy device also includes a clock, timer, alarm, wet compass and analog thermometer.

SETTING THE TIME AND DATE

1. From the time display, press **MODE** three times. The second digits and the dash below the left **T** flash.
2. Press **START/STOP**, the second digits reset to **00**.
3. Press **SPLIT/RESET**. The minutes digits flash.
4. Repeatedly press or hold down **START/STOP** until the desired minutes appear.
5. Press **SPLIT/RESET**. The hours digit(s) flash.
6. Repeatedly press or hold down **START/STOP** until the desired hour appears.

To choose between 12 and 24-hour formats, repeatedly press **START/STOP** to advance the hour digit until the desired format appears.

- If you are setting time based on a 12-hour format, **A** or **P** appears next to the minutes when you set the time.
- If you are setting time based on a 24-hour format, **H** appears next to the minutes when you set the time. The range is **0** to **23**.

7. Press **SPLIT/RESET**. **DATE** appears with the day digits flashing. ✓
8. Repeatedly press or hold down **START/STOP** until the correct day of the month appears.
9. Press **SPLIT/RESET**. The month digits flash.
10. Repeatedly press or hold down **START/STOP** until the correct month appears.
11. Press **SPLIT/RESET**. The dash below the currently set day of the week flashes. ✓

12. Repeatedly press or hold down **START/STOP** until the correct day of the week appears.
13. Press **MODE** to return to the time display.

SETTING THE ALARM TIME

The daily alarm sounds for one minute at the preset alarm time.

1. From the time display, press **MODE** twice. The hour digits and the dash below **M** flash.
2. Repeatedly press or hold down **START/STOP** until the desired hour digits appear.
3. Press **SPLIT/RESET**. The minute digits flash.
4. Repeatedly press or hold down **START/STOP** until the desired minutes digits appear.
5. Press **MODE** to store the alarm setting and return to the time display. ☹ appears when the alarm is set.
6. To view the alarm time from time display, hold down **SPLIT/RESET**. Release it to return to the time display.

TURNING THE ALARM ON AND OFF

1. From the time display, hold down **START/STOP** and **SPLIT/RESET** at the same time. The watch beeps and the alarm time appears.
2. Release **START/STOP** and **SPLIT/RESET** to return to the time display.

At the preset alarm time, the watch beeps for about one minute. To silence the alarm sooner, press **SPLIT/RESET**. ✓

✓ NOTE ✓

Setting the Time and Date

- From time display, hold down **START/STOP** to review the date. Release **START/STOP** to return to the time display.
- You must manually set the date to February 29 in a leap year.
- If you need to set the date back a month, you must first set the month to the desired month, then set the date. For example, if the calendar setting is now April 1 and you want to set it back to March 31, you must first set the month to **3** (March), repeatedly press **SPLIT/RESET** until the day digits flash, then set the date to **31**. You can not set the date to **31** when the month is **4** (April) because there are only 30 days in April.
- The day of the week may not be set during the initial setting after a power loss. After setting the time and date, cycle through the steps again to this point to set the day of the week.

Turning the Alarm On and Off

The snooze feature allows you to silence the alarm temporarily. When the alarm sounds, press **START/STOP**. The alarm is silenced and sounds again after five minutes



RadioShack®

www.radioshack.com™

© 2002 RadioShack Corporation.

All Rights Reserved.

RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

WARNING

- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Keep button-cell batteries away from children. Swallowing a button-cell battery can be fatal.

CAUTION

Use only fresh batteries of the required size and recommended type.

NOTE

You can use the split time function as many times as you want until you stop the stopwatch.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street,
6th Floor, Fort Worth, TX 76102

12/99

TURNING THE CHIME ON AND OFF

An hourly chime can be set to automatically sound at the beginning of each hour.

1. From the time display, hold down **SPLIT/RESET** and press **MODE**. The alarm time and all the seven dashes appear below the days. This indicates the chime will sound at every hour every day.
2. Release **MODE** and **SPLIT/RESET** to return to the time display.

To turn the chime off, hold down **SPLIT/RESET** while in the time mode, then press **MODE**. The alarm time appears while the seven dashes disappear.

USING THE STOPWATCH


The stopwatch counts elapsed time in minutes and seconds up to 24 hours. For the first 30 minutes, it also shows hundredths of second. At 24 hours, the stopwatch begins counting from **0:0000** again. The stopwatch continues until you turn it off.

1. From the time display, press **MODE**. The dashes below **S**, **F**, and **S** flash.

 
If the display does not show **0:0000**, press **SPLIT/RESET** to reset the stopwatch.


2. To start the stopwatch, press **START/STOP**. The dashes below **S** and **S** flash and the stopwatch starts.

SPLIT TIME

1. To measure split time (the total elapsed time from the start time), press **SPLIT/RESET** while the stopwatch is running. The stopwatch continues to run. (The **:** and the dashes below **S**, **T** and **S** flash to indicate the stopwatch is running).
2. Press **SPLIT/RESET** again to view the total elapsed time. 

REPLACING THE BATTERY

Your watch comes with one LR 41 button cell battery installed for power. When the display dims or the stopwatch stops working, replace the battery. 

For the best performance and longest life, we recommend RadioShack alkaline batteries. 

1. Use a Phillips screwdriver to remove the screws from the back of the stopwatch, then lift off the back cover.

2. Replace the old battery with a new battery, positive (+) side up.
3. Replace the back cover and secure it with the screws.

If battery replacement becomes necessary, the memory may be lost. After installing a fresh battery, reset the time and date, if needed.

CARE

Keep the stopwatch dry; if it gets wet, wipe it dry immediately. Use and store the stopwatch only in normal temperature environments. Handle the stopwatch carefully; do not drop it. Keep the stopwatch away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

SERVICE AND REPAIR

If your stopwatch is not performing as it should, take it to your local RadioShack store for assistance. Modifying or tampering with the stopwatch's internal components can cause a malfunction and might invalidate its warranty.